




STONE Accessories

www.stone4x4accessories.com

Fitting Instructions for Bumper Steps

Product
Code
BSP25 or
BSP26

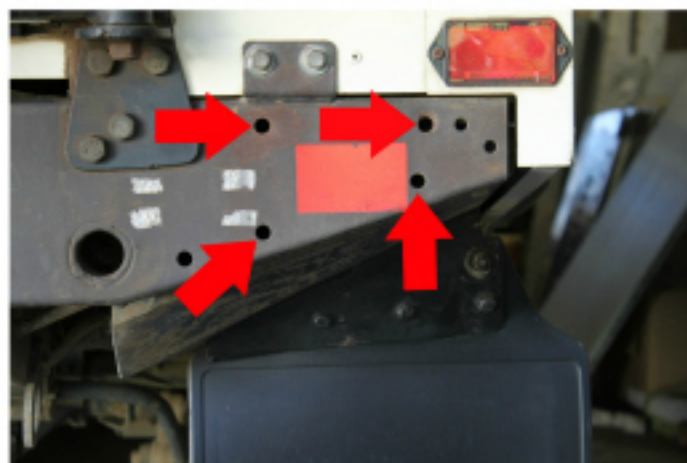

1. Line bumper step up to holes indicated in photo.
2. Use the 4 bolts, washers and nuts supplied to mount bumper step.
3. Level the step and tighten all 4 nuts.

Contents: Bumper step / 4 #10 bolts / 4 #10 washers / 4 #10 nuts.

Tools Required: 2 #17 wrenches.